 
## **Replacement Door Instructions**

ID\_7306\_Voice\_replacement\_door







Push up the center channel and then slide the door to one side.




Gently lower the door.



While supporting the doorframe from below, detach the retention strap from the housing (at fixture end) by sliding sideways towards the center of the fixture and pulling out of the slot. Repeat at opposite end of fixture.


## Install new door

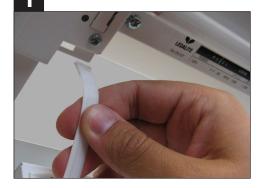

Remove new door from packaging. Raise door while holding retention strap.



While supporting from below, insert loose end of retention strap into rectangle end of slot and slide towards end of the fixture until it clicks into position. Repeat at opposite end.

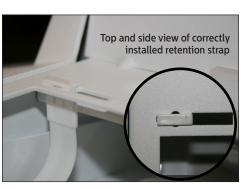



Supporting the doorframe beneath the center channel, raise and slide back into position.