

Recessed LED

ArcForm (36), PureFX (94), Vectra (97) and Voice (98)


Installation in Drywall or Ceilings
Requiring Flanges



! IMPORTANT


If you are installing any configuration type other than standalone, additional steps are required for wiring. Please refer to the installation instructions for that configuration type to determine wiring requirements.

1 Install drywall kit

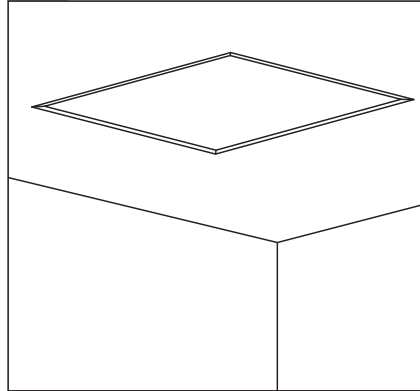


Install drywall kit frame in ceiling. Refer to Drywall Kit specification sheet for mounting options and ceiling opening sizes.

2 Make all electrical connections

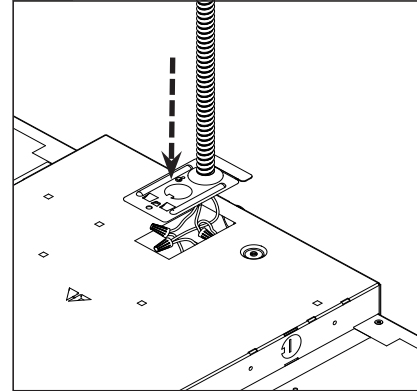


Make all electrical connections to the fixture. Attach wire access cover plate.

3 Lay fixture into drywall kit frame

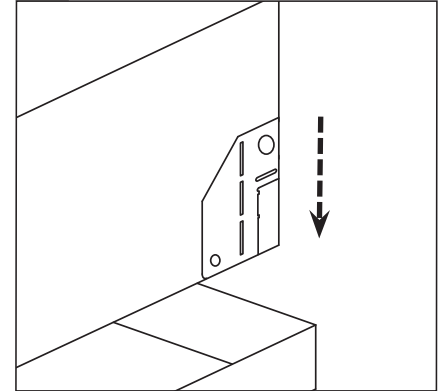


Lay fixture into drywall kit frame.

4 Open lens frame

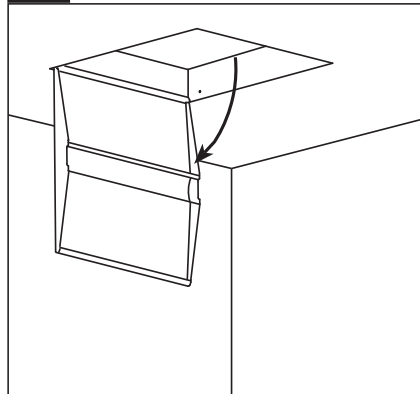

Push up on center channel of lens frame and shift in direction of hinges. Lens frame will then swing open in a downward direction. If fixture has lens frame restraint, release by pressing inwards.

5 Fasten fixture

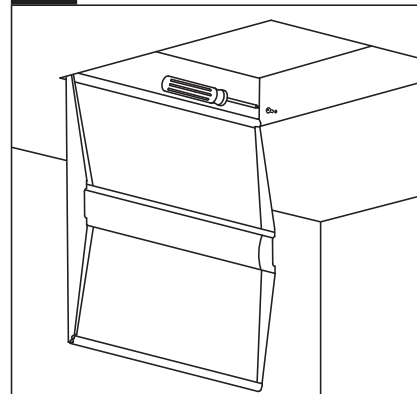

Use a #8x1/4" sheet metal screw (supplied by others) to fasten fixture to drywall kit frame from inside of housing. Repeat on each corner.



ATTENTION: Install in accordance with national and local building and electrical codes.

Page 4